

Teile Nr. 0.082-810.0

Montageanleitung fuer  
Fahrbanduese

Assembly instructions for  
gangway tool

Notice du montage pour l'outil  
de suceur

Istruzioni di montaggio per lo  
bocchetta corsia


Montagevoorschrift voor  
voorzetzuigmond

Instrucció de montaje para la  
boquilla de calzada

Monteringsanvisning for  
kjorebanemunnstykke

Kiintien etusuuttimen asennusohje

0.

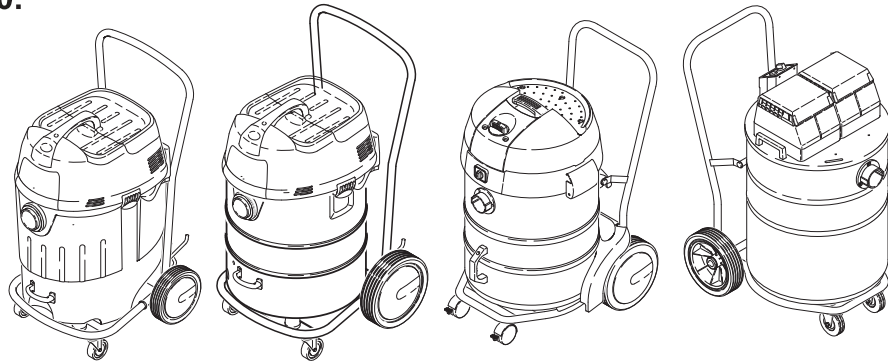

NT 65/2 TC, 72/2 TC, 702, 702i, 802i

NT 65/2 TC, NT 72/2 TC,  
NT 702



⚙️ 4x ⚙️ 4x ⚙️ 4x ⚙️ 4x

NT 65/2 Me


⚙️ 4x ⚙️ 4x ⚙️ 4x ⚙️ 4x

NT 802i


⚙️ 4x ⚙️ 4x

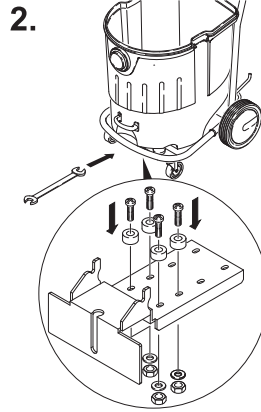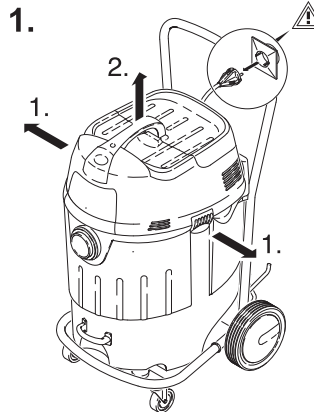


NT 65/2 TC  
72/2 TC,  
702 TC

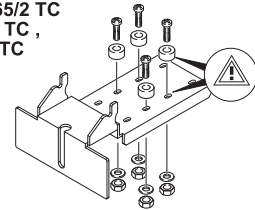



NT 702i

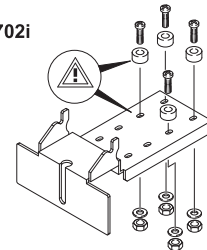


NT 802i

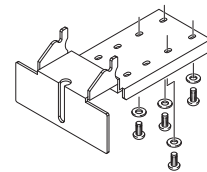


3.

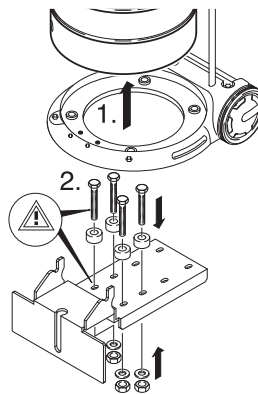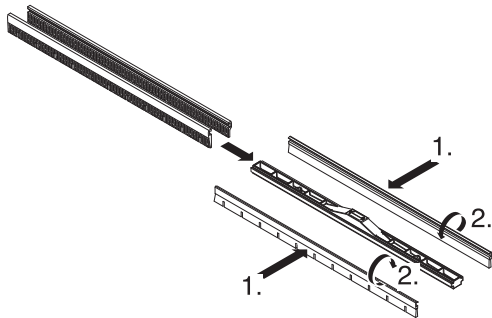

4.

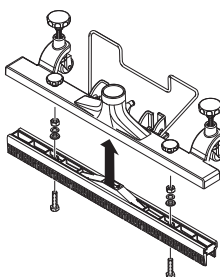


5.

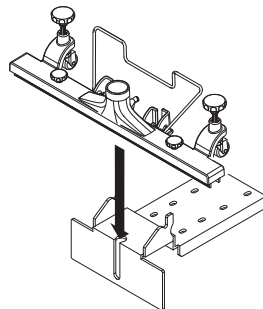


6.

NT 65/2 TC, NT 72/2 TC,  
NT 702i -- 560mm  
NT 65/2 Me -- 480mm  
NT 802i -- (690mm)

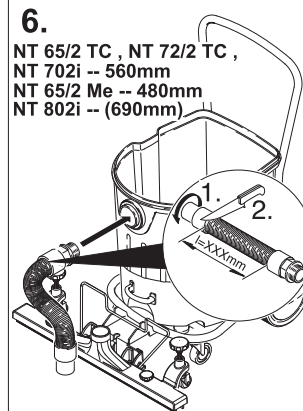

7.

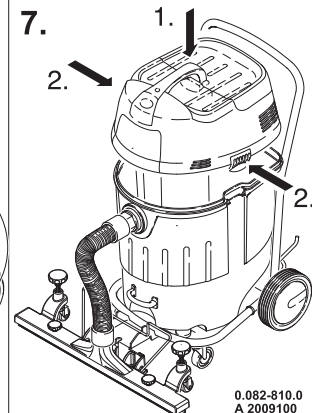

0.082-810.0  
A 2009100